

Straight Plug—Military Clamp for Flexible Cable

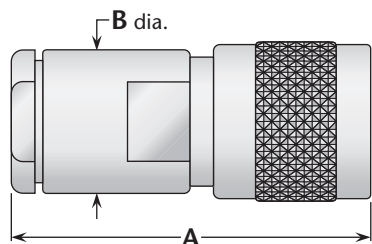


Figure 1

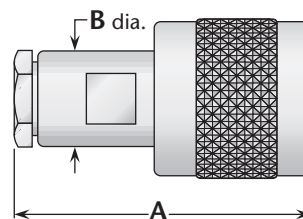


Figure 2

Cable Group	Figure	Dimensions		Plating		Delta P/N	Assembly Procedure/ Trim Code
		A	B	Body	Contact		
2, 3	1	1.47	.75	Nickel	Silver	1901-004-N000-1	A/01
2, 3	1	1.78	.75	Nickel	Silver	1901-004-N000*	A/21
2, 3	1	1.78	.75	Nickel	Silver (C)	1901-004-N001*	A/28
5, 6	2	1.53	.50	Nickel	Silver	1901-015-N000	A/17
5, 6	2	1.53	.50	Nickel	Silver (C)	1901-015-N001	A/02

* High voltage type.

Right Angle Plug—Military Clamp for Flexible Cable

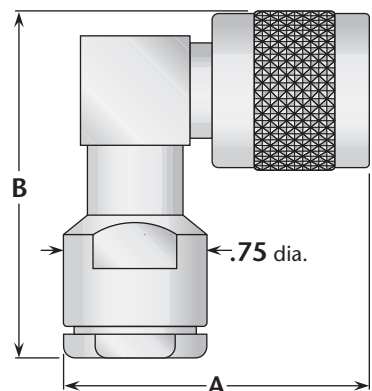


Figure 1

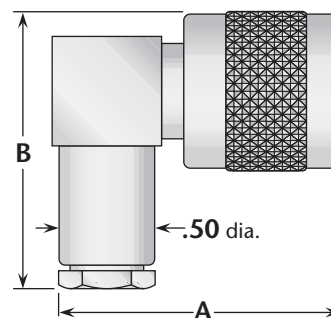


Figure 2

Cable Group	Figure	Dimensions		Plating		Delta P/N	Assembly Procedure/ Trim Code
		A	B	Body	Contact		
2, 3	1	1.56	1.94	Nickel	Silver (C)	1904-004-N000*	A/21
5, 6	2	1.45	1.75	Nickel	Silver	1905-015-N001-2	A/17

* High voltage type.

See page 204 for cable groups. • Assembly procedures start on page 205.
(C) in contact plating column indicates captive contact. • See page 6 for alternate body plating information.