

Straight Plug—Heli-Grip® for Flexible Cable


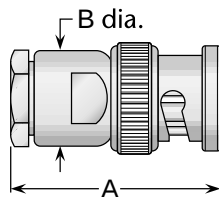


Figure 1

Heli-Grip® Cable Attachment



These connectors have captivated contacts and allow rapid, easy assembly—simply trim the cable, slide into the cone/insulator/contact assembly (left), solder the center conductor to the contact, and screw body assembly (right) onto cable assembly.

Cable Group	Figure	Dimensions		Plating		Delta P/N	Assembly Procedure/ Trim Code
		A	B	Body	Contact		
5, 6 [§]	1	1.06	.50	Nickel	Silver (C)	1001-018-N005	E/03
RG-223	1	1.06	.50	Nickel	Silver (C)	1001-015-N005-3	E/03
7	1	1.06	.50	Nickel	Silver (C)	1001-019-N005	E/03
8A	1	1.06	.50	Nickel	Silver (C)	1001-029-N005-1	E/03
8B	1	1.06	.50	Nickel	Silver (C)	1001-043-N005	E/03
9	1	1.06	.50	Nickel	Silver (C)	1001-037-N005	E/03
10	1	1.06	.50	Nickel	Silver (C)	1001-100-N005	E/03
11	1	1.06	.50	Nickel	Silver (C)	1001-038-N005	E/03

[§]Except RG-223/U.

Straight Plug—Crimp Type for Flexible Cable

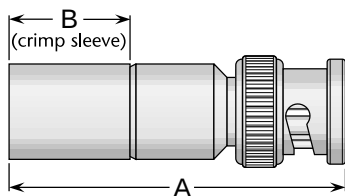


Figure 1

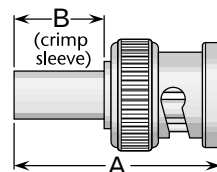


Figure 2

Cable Group	Figure	Dimensions		Plating		Delta P/N	Assembly Procedure/ Trim Code
		A	B	Body	Contact		
3A, 4	1	1.72	.63	Nickel	Gold (C)	1003-005-N000	B/11
5	2	1.09	.50	Nickel	Gold	1003-017-N000	B/18
5	2	1.10	.50	Nickel	Gold (C)	1003-017-N00E-2	B/19
6	2	1.09	.50	Nickel	Gold	1003-013-N000	B/18
6	2	1.10	.50	Nickel	Gold (C)	1003-013-N00E	B/19
7	2	1.09	.50	Nickel	Gold	1003-020-N000-2	B/18
7	2	1.10	.50	Nickel	Gold (C)	1003-019-N00E-2	B/19